

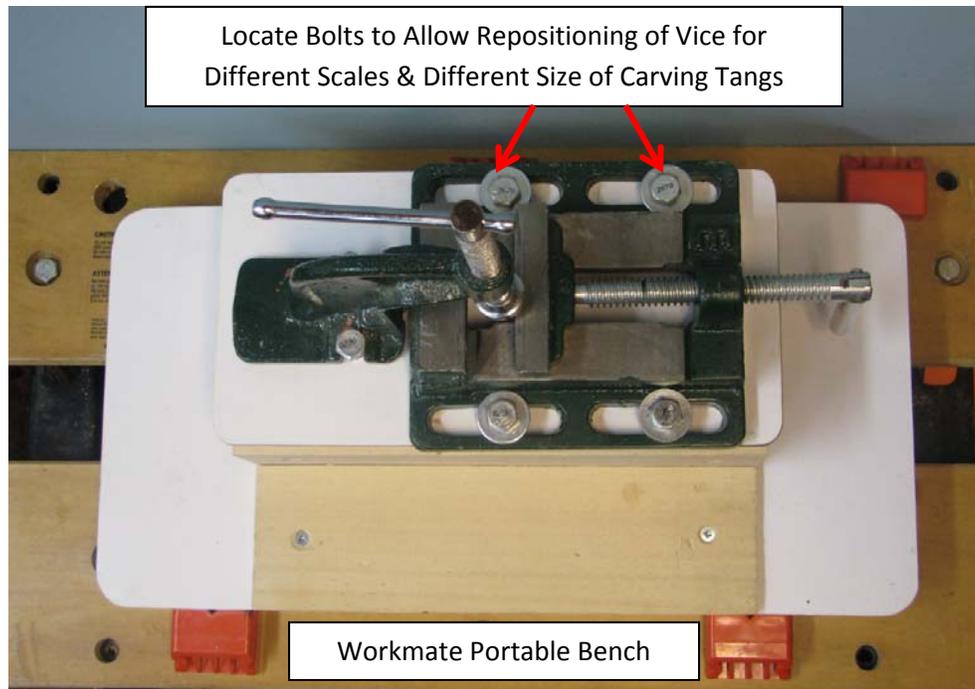


Carving Clamp Pictures & Plans

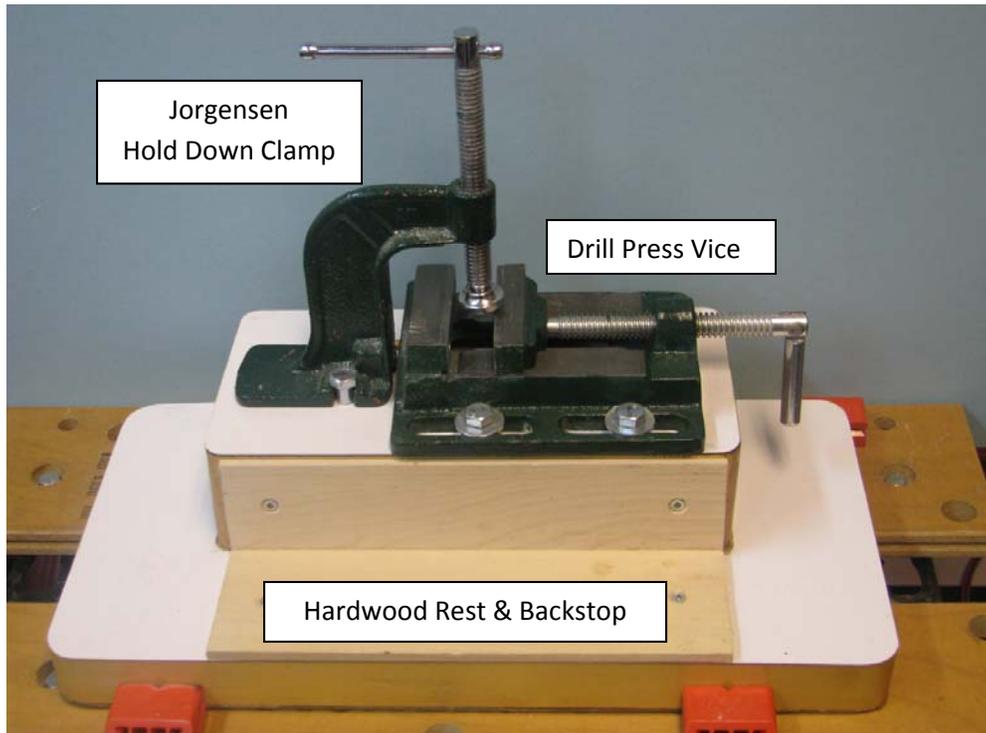

Carving Clamp in Held in Workmate Bench



Carving Clamp Pictures & Plans

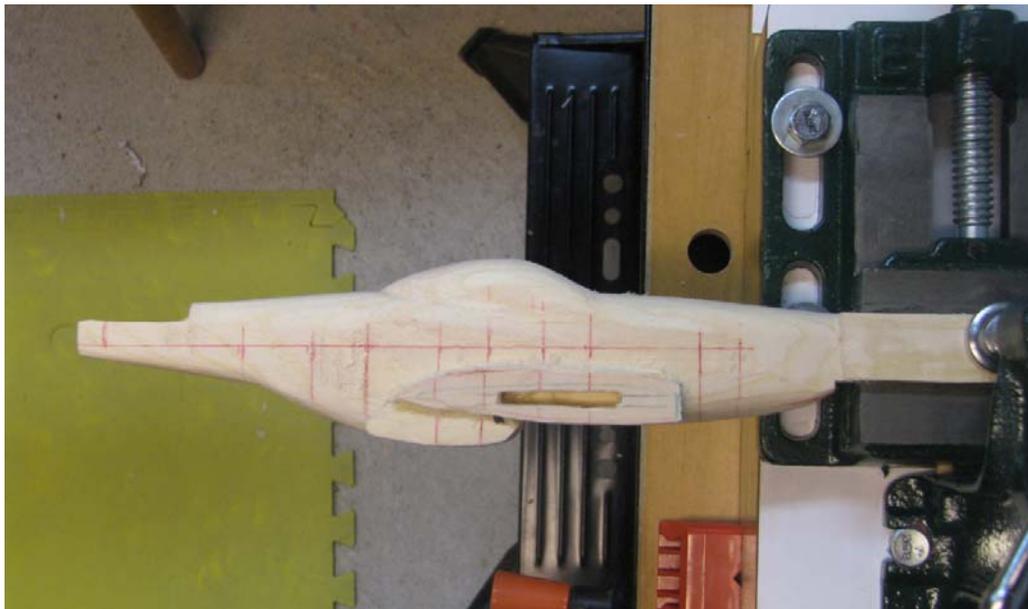

Carvings are Easily Rotated 90 Degrees for Carving & Sanding

Plans for Carving Clamp Base

Add 1/4" thick piece of hardwood as a resting piece and backstop for minor hand held carving. Attach using counter sunk screws to allow future replacement when worn

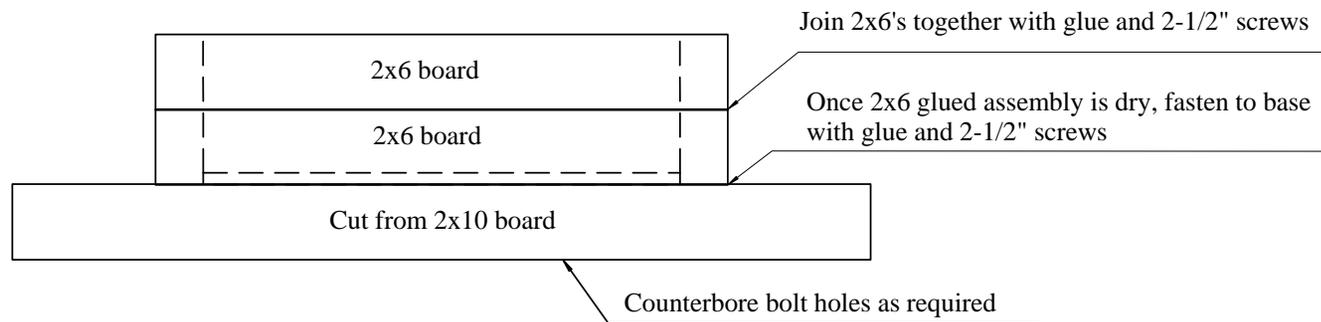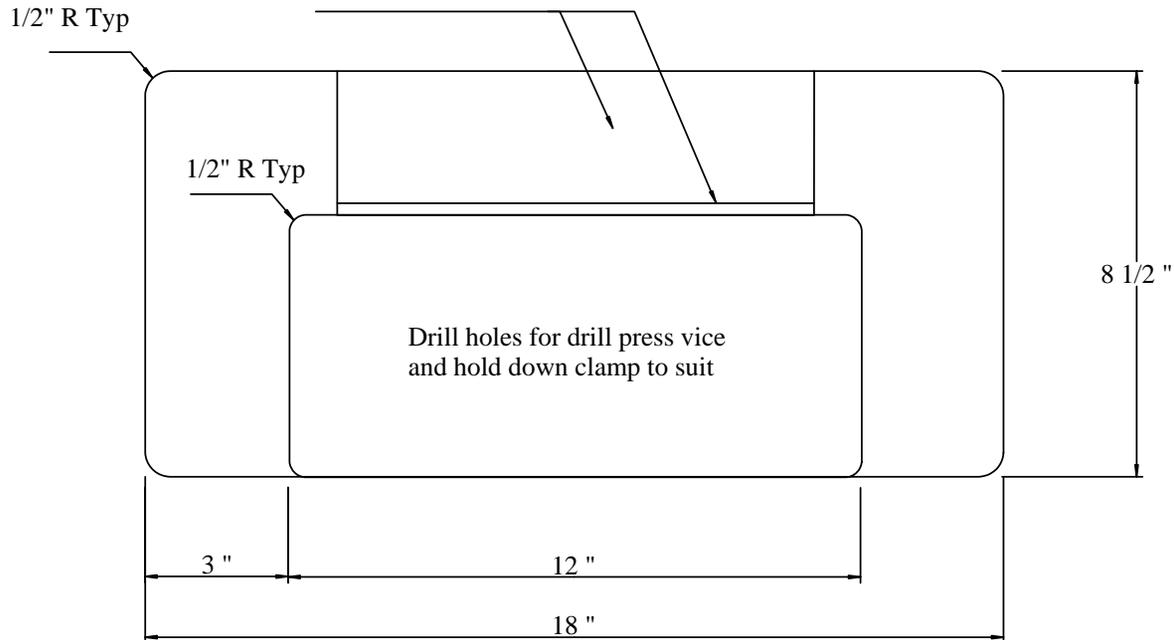

Notes:

- 1 - Dimensions are for reference only and may require changes to suit specific drill press vice & hold down clamp
- 2 - Drill press vice and Jorgensen hold down clamp are available from Busy Bee Tools or other supply companies
- 3 - Mark out bolt pattern for hold down clamp and drill press vice before gluing & installing screws
- 4 - Seal all surfaces with varnish or paint to prevent future warping of assembly
- 5 - Feel free to modify as required and enjoy building the carving clamp